 
 



## INSTALLATION INSTRUCTION

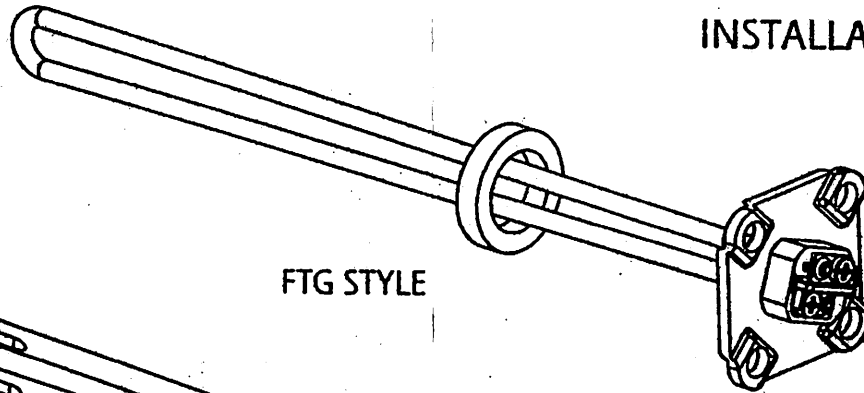


FTG STYLE

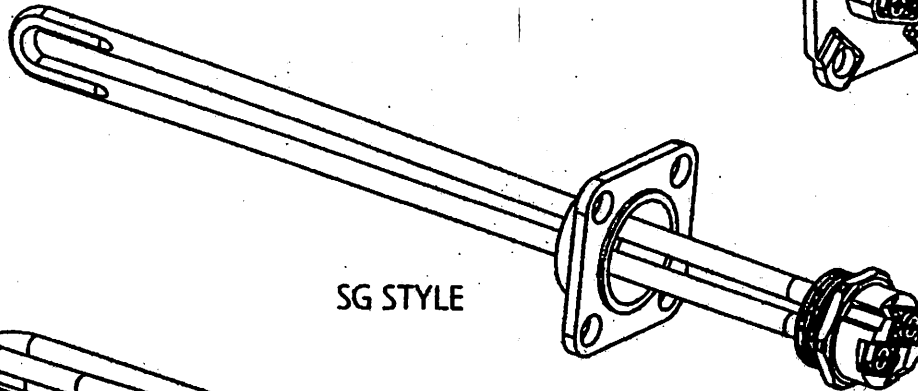

 SG STYLE

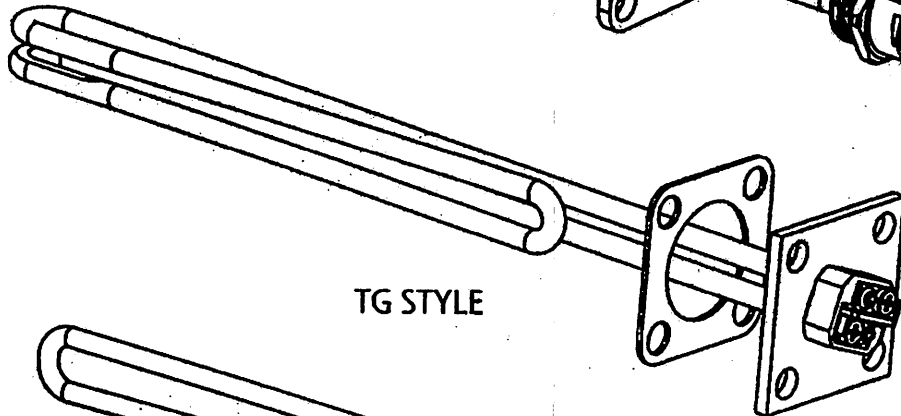

TG STYLE

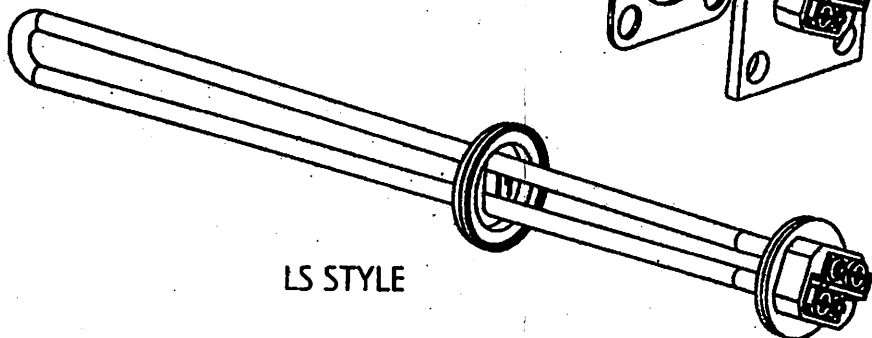 

LS STYLE

1. Select the same element that is being replaced. Check flange style, voltage and wattage.
2. Disconnect all electric power to tank.
3. Turn off cold water supply to tank.
4. Open hot water faucet to relieve pressure.
5. Drain water heater to a level below the element being replaced.
6. Disconnect wires from heating element and remove it from the tank.
7. Insert new element, making certain the gasket is positioned properly.
8. If bolt-on type, tighten bolts evenly.
9. Connect wires to element and fill tank with cold water. Note: make certain the tank is full.
10. Open water faucets to expel any trapped air in tank.
11. Turn on electric power supply.